

Pocket DAB radio

LHDAB14




Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations. The following items are included:

- Main Unit
- Earphones (Aerial)
- USB Cable
- Instruction Manual

Product Overview

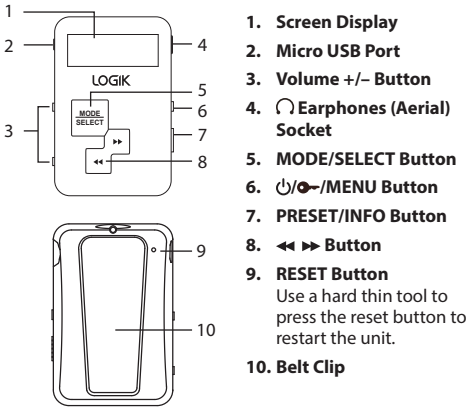

1. Screen Display
2. Micro USB Port
3. Volume +/- Button
4. Earphones (Aerial) Socket
5. MODE/SELECT Button
6. Power/MENU Button
7. PRESET/INFO Button
8. Left/Right Arrow Button
9. RESET Button
Use a hard thin tool to press the reset button to restart the unit.
10. Belt Clip

⚠ Plug in and fully extend the earphones (aerial) before switching on the radio.

First Charge / Recharge the Battery


The unit has a built-in rechargeable Lithium (Li) battery. The battery is charged automatically whenever the unit is connected to a computer or a USB charging device with the USB cable. When the unit is switched on, the screen display will show a charging symbol to indicate the unit is in charging. The charging symbol will appear full when finished.

⚠ Do not overcharge the battery as it may shorten its life.

- It takes 3 hours (approx.) to fully charge the battery.
- A fully charged unit has up to 12 hours of playback time at 2/3 volume level.


Using Earphones (Aerial)

Turn down the volume before connecting the earphones (aerial). Before switching on the unit, make sure that the earphones (aerial) is fully extended and completely inserted into the socket. After switching on the unit, slowly raise the volume with the earphones (aerial) on until you reach your desired volume.

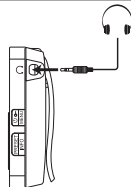

- Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using earphones (aerial), especially for extended periods of time.
- Using other headphones may affect performance of unit. Some headphones with integrated microphones may have low volume and affect reception.

Display Overview

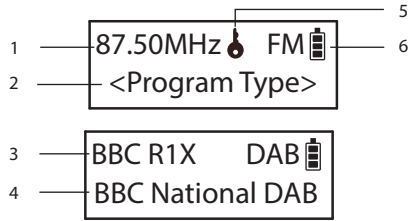

1. FM Frequency
2. FM Station
3. DAB Frequency
4. DAB Station
5. Key Lock Icon
6. Charging Battery Status

Basic Operation

Powering ON/OFF

Make sure the battery power level is sufficient and the earphones (aerial) are connected.

- Press the Power/MENU Button to switch the unit on.
- Press and hold the Power/MENU Button to unlock the unit, then press and hold the Power/MENU Button to turn off.

Selecting Modes

Press and hold the MODE/SELECT Button repeatedly to switch between modes (DAB or FM).

★ When you power up the unit again, the unit plays the same mode and station (DAB or FM) as the last operation.

Key lock

When the unit is idle for 30 seconds after it is switched on, key lock will be activated and the screen will show **⏏**. Press and hold the Power/MENU Button to unlock.

Adjusting Volume

Press the + or - Button to increase/decrease the volume.

DAB Operation

To listen to the tuned stations press either the Left/Right Arrow Buttons and press the MODE/SELECT Button. Each time you press the Left/Right Arrow Buttons, you will skip to the previous or next stored station (including primary and secondary station). The unit will display the station name.

Auto Scan

1. In DAB mode, press the Power/MENU Button and then Left/Right Arrow Button to select **Auto Scan**.
2. Press the MODE/SELECT Button to start auto scan.

Manual tuning

As well as the auto tune function, you can manually tune the receiver. This can help you when adding stations that were missed while auto tuning.

1. In DAB mode, press the Power/MENU Button and then Left/Right Arrow Button to confirm.
2. Press Left/Right Arrow to choose your desired station from channel 5A to 13F.
3. Press the MODE/SELECT Button to confirm.

DAB Display Modes

Press the PRESET/INFO button repeatedly to show the information of the station.

FM Operation

Switching from DAB to FM Mode

To switch the unit from **DAB** to **FM** mode, press and hold the **MODE/SELECT** Button. The display shows "**Switching to FM**". On the top line of the display is the current frequency. On the bottom of the display, **<Programme Type>** will show since no channel is tuned in and no RDS (radio data system) data is available.

Auto Scan

In FM mode, press and hold the **◀▶** Button to start auto scan.

Manual Scan

To search FM stations manually, simply press the **◀▶** Buttons repeatedly until your desired frequency is reached.



With FM radio it may be necessary to fine tune each station by pressing the **◀▶** buttons repeatedly. Each press will adjust the frequency by 0.05MHz. If reception is still poor, try moving the radio to another location.

FM Display Modes

Press the **PRESET/INFO** button repeatedly to show the information of the station.

Presetting Stations (DAB or FM mode)

You can store up to 10 of your favourite stations to the memory. This will enable you to access your favourite stations quickly and easily.

1. To store a preset, you must first be listening to the station that you would like to save, then press and hold the **PRESET/INFO** Button.
2. Press the **◀▶** Buttons to select your desired preset station number.
3. Press and hold the **MODE/SELECT** Button to confirm the selection.
4. The station will be stored and the display will show "**Preset ## Stored**".

Recalling a Preset Station

1. Press and hold the **PRESET/INFO** Button.
2. Press the **◀▶** Buttons to select your desired preset station number.
3. Press the **MODE/SELECT** Button to confirm the selection.
4. If you choose a preset that has been allocated a station, the display will show "**Preset ## Stored**".

System Reset

There may be times when you need to reset your unit back to the factory settings. If you experience reception problems you may want to reset and try again. If you move the unit to another part of the country and pick up the local and national DAB stations in that area, your previously tuned channels may no longer be available.

Press the **⏻** Button and then press **◀▶** Button to select **System Reset**. Press the **MODE/SELECT** Button to confirm. The display shows **Press Select to Reset**. Press the **MODE/SELECT** Button to confirm. The display will show **System reset OK**. The unit will then start the Full scan for DAB channels immediately.



After the system reset, all the tuned stations, DAB & FM preset stations will be erased.

Maintenance

Cleaning the Unit



Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray an aerosol at or near the unit.

Hints and Tips

Problem	Cause / Solution
No Sound	Adjust the volume control, it may not be turned up.
Static Sound	Signal reception is too low. Move the unit to a stronger signal location.
Sound is distorted	Volume is too high. Adjust the volume control.
Desired station not found	Weak signal. Use the Manual Scan function.
The display shows " No Service "	<ul style="list-style-type: none">• No DAB coverage in your area or poor reception. Move the unit to an area with DAB coverage.• Adjust the headphone (aerial) cable for the optimum reception.
The display is blank	This may occur if the broadcaster changes the label of a service or removes a label while tuned. The unit will try to retune or perform a scan.

Specifications

Mains Supply	5 V / 0.5 A
Built in Battery	3.7 V / 1000 mAh
Dimension	46 mm (W) x 22 mm (D) x 70 mm (H)
Radio Frequency Range	FM 87.5 MHz – 108 MHz DAB Band III 174.928 – 239.200 MHz

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Earphones

- Listening to loud sounds for prolonged periods of time may permanently damage your hearing.

- Before putting on earphones, turn the volume down then put the earphones on and slowly increase the volume until you reach a comfortable listening level.

Supervision

- Children should be supervised to ensure that they do not play with the unit.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the power supply before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.

KNOWHOW

For general information about this appliance and handy hints and tips, please visit www.knowhow.com/knowledgebank or call 0344 5611234.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

DSG Retail Ltd. (co. no. 504877)
Maylands Avenue, Hemel Hempstead, Herts., HP2 7TG, UK

IB-LHDAB14-141007V2