

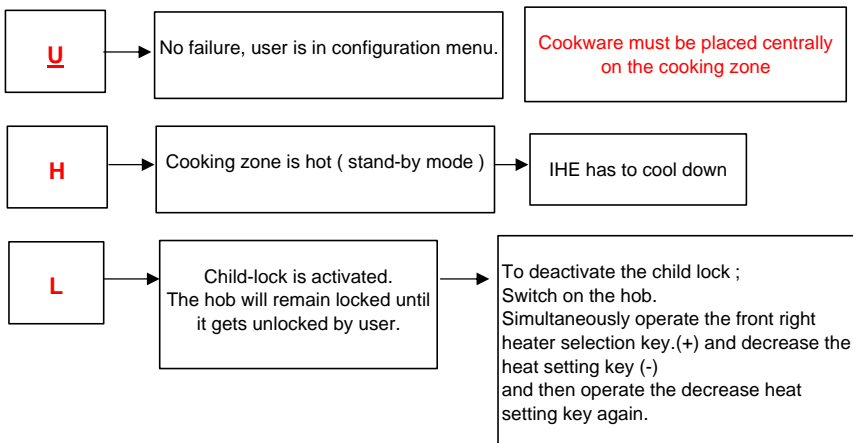


**Induction hob doesnt work :**

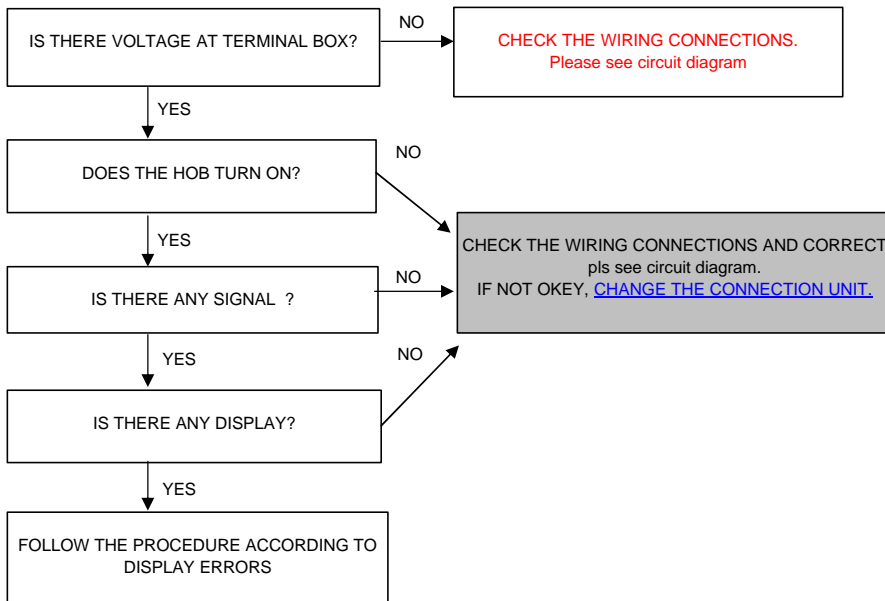


**Induction hob display errors**

Note : Ex means that "E" blinks with the failure number x.

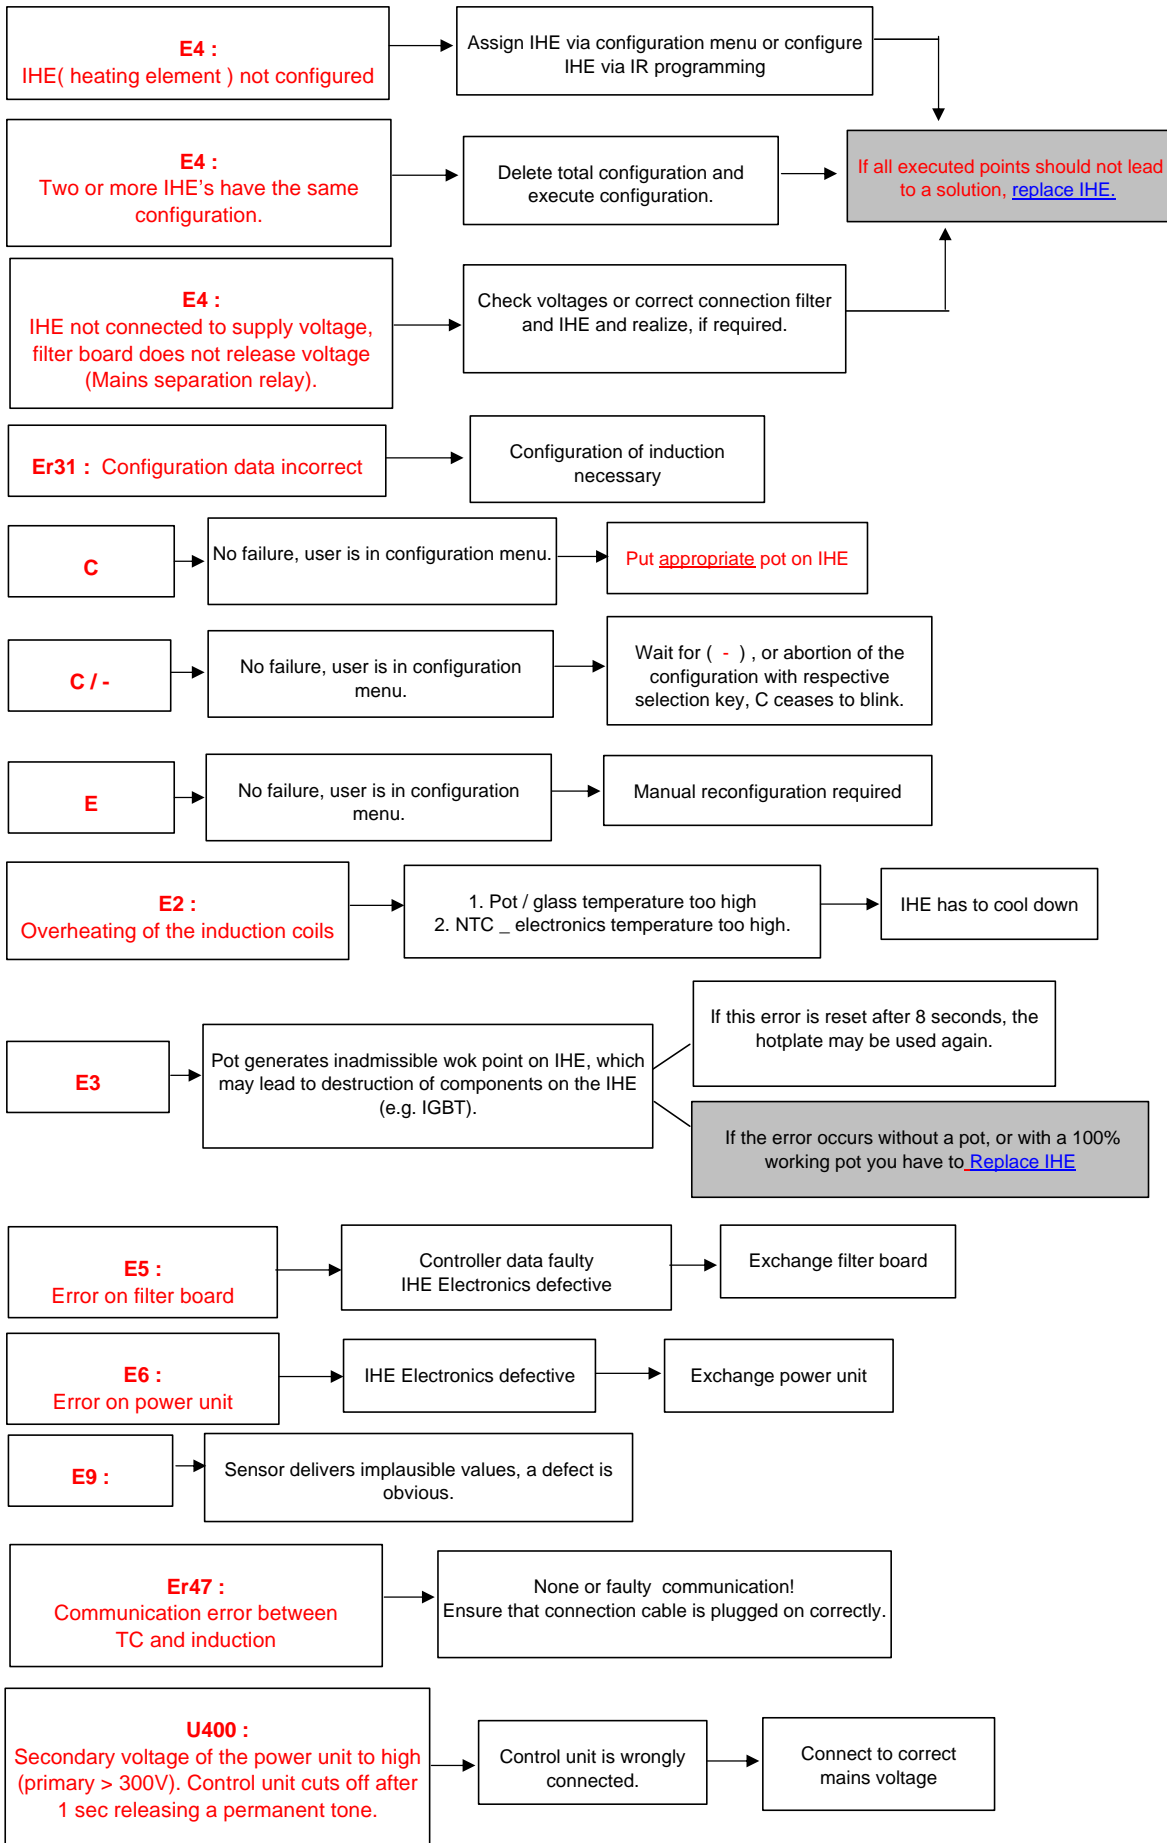

**Changing connection unit of induction hobs :**

Turn over the hob and remove the **connection unit cover**

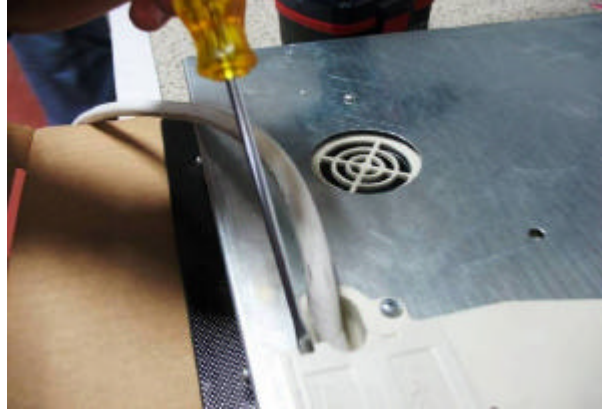


Unscrew the connection unit screws




Turn over the hob and remove ceramic glass



Unscrew all surrounding screws of hob :

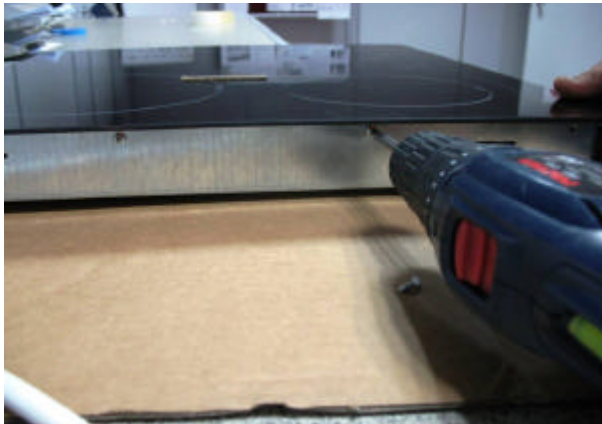

Remove all wirings connected :

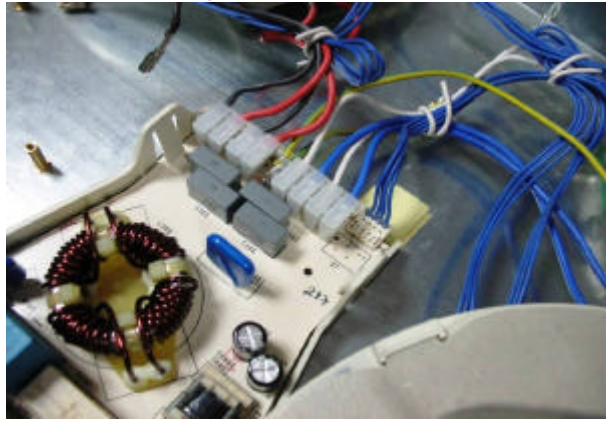

While reassembling please refer to circuit diagrams

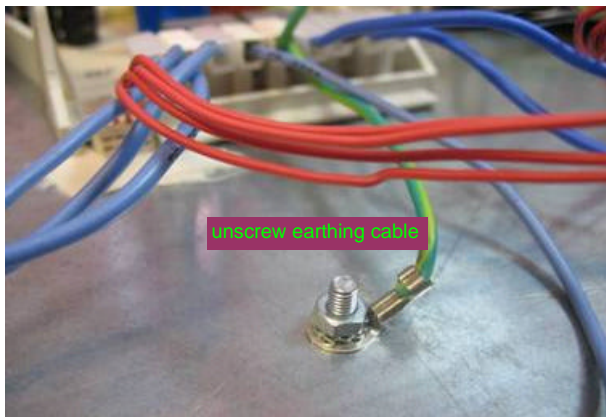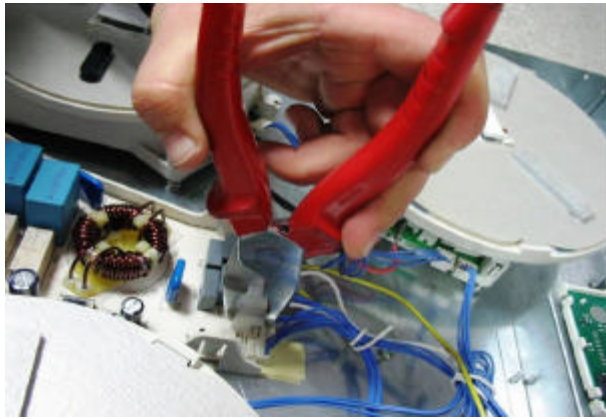


Press on the hooks of connection unit ( with a screwdriver )



You may remove and change connection unit.

**Changing heating element ( IHE) & touch control unit**


Unscrew all surrounding screws of hob.

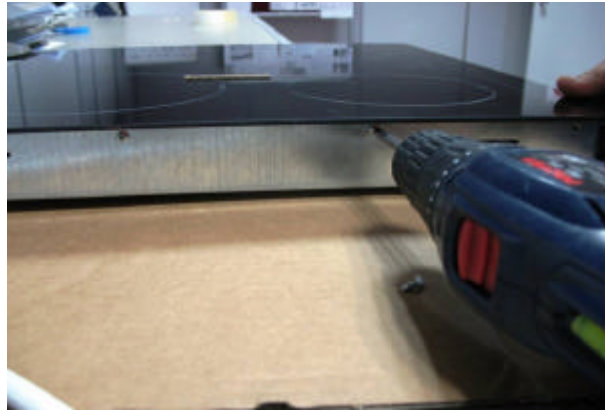


Remove ceramic glass of hob




Pull off terminal connections on the heating element ( IHE )

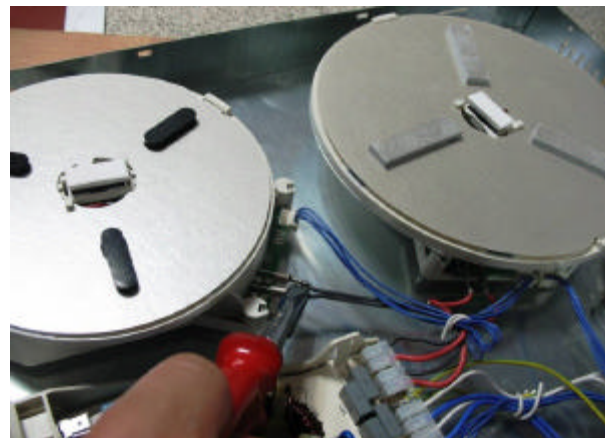

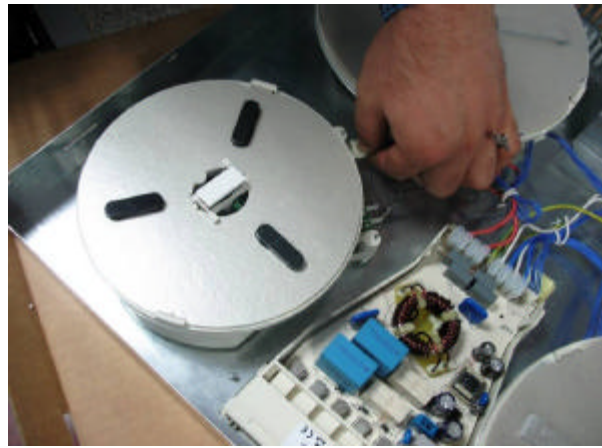

Remove heating element and change with another if necessary

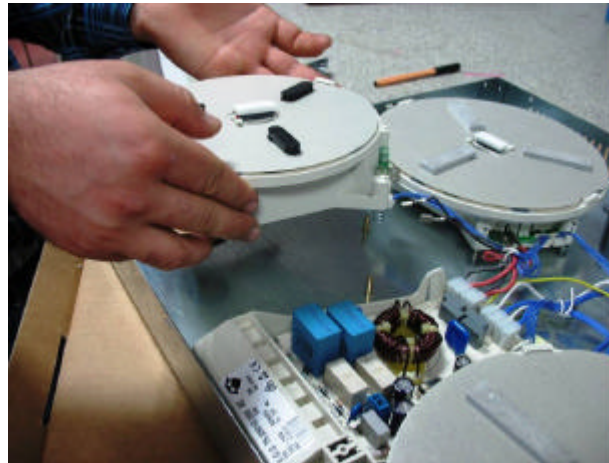

To change the **touch control unit** ; remove connected wirings

